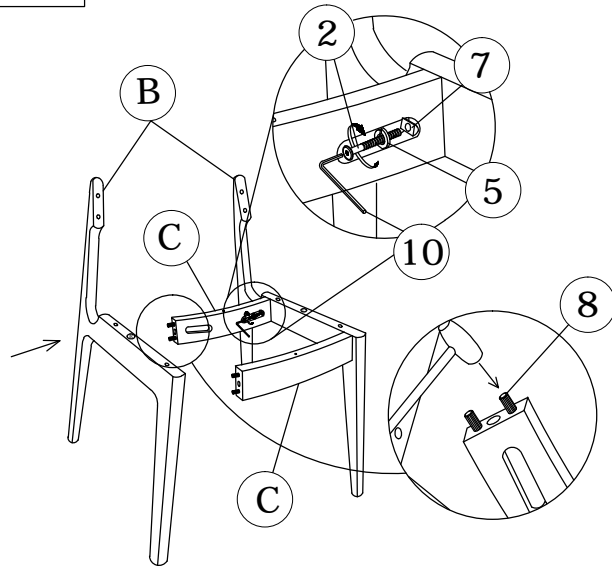


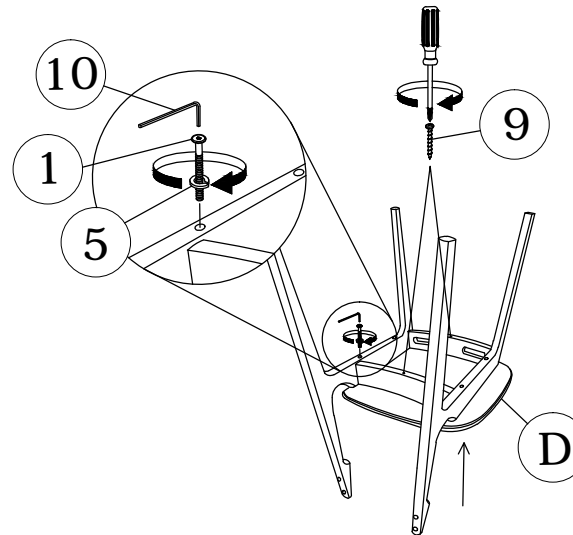
# ASSEMBLY INSTRUCTION

# DINING CHAIR

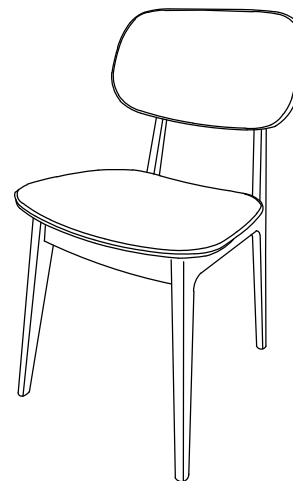
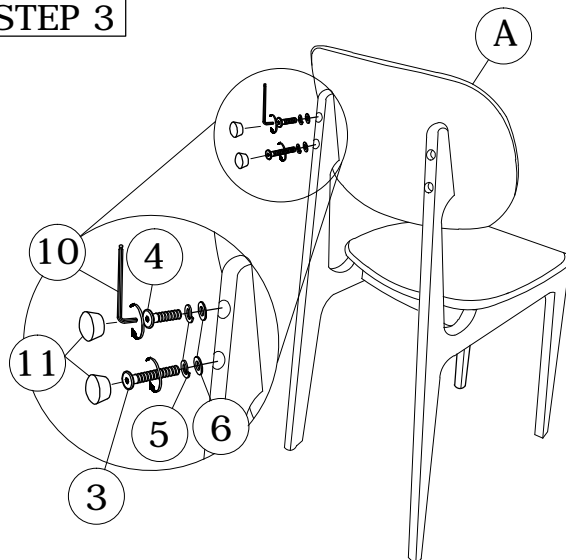
## STEP 1



## STEP 2



## STEP 3

 

 





 




COMPLETED CHAIR ASSEMBLY

Read instruction carefully. Remove all wrapping material, staples and straps from the carton. See Hardware and Furniture Parts List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts of a clean and flat soft surface, such as car-pet or rug to prevent from being scratched.

### CAUTION :

KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC M6 X 70MM (RB) 	4 PCS
2	JCBC M6 X 50MM (RB) 	4 PCS
3	JCBC M6 X 40MM (RB) 	2 PCS
4	JCBC M6 X 25MM (RB) 	2 PCS
5	SPRING WASHER 5/16" (RB) 	12 PCS
6	FLAT WASHER 6 X13MM (RB) 	4 PCS
7	SCREW PIN 15MM x 15MM 	4 PCS
8	WOOD DOWEL M10x30MM 	8 PCS
9	PH5 x 32MM (BLK) 	2 PCS
10	ALLEN KEY M4 (BALL SHAPE) 	1 PC
11	WOOD BUTTON 	4 PC

PART LIST		
ITEM	DESCRIPTION	QTY
A	CHAIR BACK	1 PC
B	CHAIR LEG L/R	2 PCS
C	FRONT & BACK RAIL	2 PCS
D	CHAIR SEAT	1 PC